



Technical Data

Round Base Pipe Boot-Flasher®

Installation Procedure



STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

- STEP 1:** Cut to pipe diameter marked on Flashers® (this is approximately 20% smaller than the diameter of the pipe).
- STEP 2:** Slide the Flashers® down the pipe, using water to lubricate if necessary.
- STEP 3:** Form & bend the aluminum base of the Flashers® to fit the surface of the roof.
- STEP 4:** Seal the Flashers® by applying urethane/silicone sealant between the flasher & the roof. Use a large slot screwdriver to press the base down tightly.
- STEP 5:** Fasten the Flashers® with weather-resistant fasteners to complete the seal.

SIZE CHART

Flasher's® Size	1	2	3	4	5	6	7	8	9
Outside Pipe Diameter (inch)	1/4" to 2"	1 3/4" to 3 1/4"	1/4" to 5"	3" to 6 1/4"	4 1/4" to 7 1/2"	5" to 9"	6" to 11"	7" to 13"	10" to 19"
Base O.D. Diameter	4 3/4"	6 1/4"	7 3/4"	9 1/4"	10 3/4"	12 1/4"	14 1/4"	16 1/2"	25 1/2"
Top Diameter	Closed	1 3/8"	Closed	2 1/4"	3 1/2"	4"	4 1/2"	5 1/2"	7 3/4"
Carton Quantity	10	10	10	5	5	5	5	5	2

MATERIAL SPECIFICATIONS

Test Type	EPDM	Silicone
Advance ozone resistance test @500 pphm	70 Hours	70 Hours
High Temperature: Intermittent- Continuous-	+275 degrees F +212 degrees F	+500 degrees F +437 degrees F
Low Temperature: Resistance tested to- Tensile Strength-	-65 degrees F 1,450 psi	-100 degrees F 700 psi



511 Central Park Drive, Sanford, Florida 32771-6653
 407.328.5300 800.334.9815 407.328.5250 (fax)